

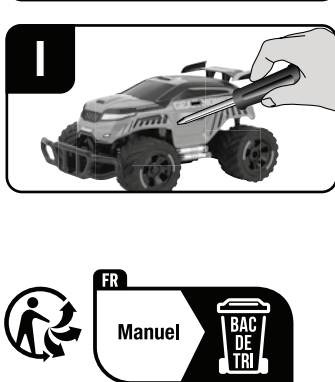
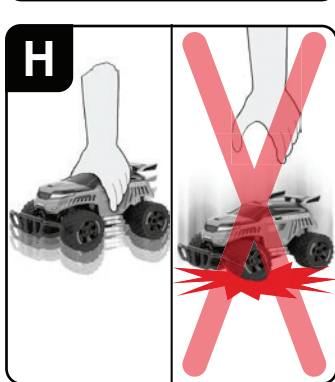
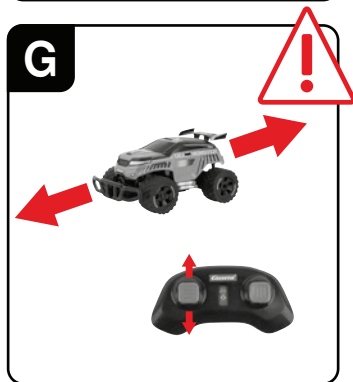


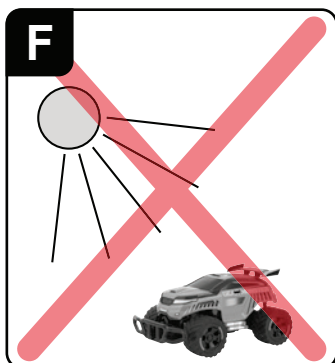

Saugos instrukcijos Drošības instrukcijas Ohutusalaused juhised

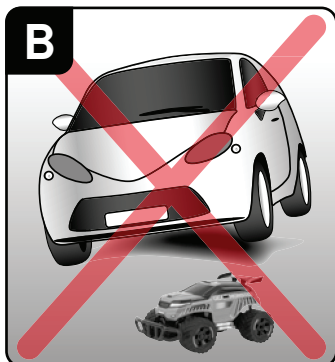

1

USB C tipo / USB Type-C / USB-C



3,7 V
500 mAh!
1,85 Wh
Li-Ion

**USB**

[ikrovimo kabeliā]
[uzlādes kabeli]
[lādīmisiņģitmed]



2x 1.5 V Micro AAA baterijas
2x 1,5 V Micro AAA baterijas
2 x 1,5 V micro AAA patareid

2

1

USB

[ikrovimo kabeliā]

[uzlādes kabeli]

[lādīmisiņģitmed]

**USB**

[ikrovimo kabeliā]

[uzlādes kabeli]

[lādīmisiņģitmed]

2

3,7 V 500mAh!
1,85 Wh Li-Ion

**USB**

[ikrovimo kabeliā]

[uzlādes kabeli]

[lādīmisiņģitmed]

LED Raudonas = [ikrovimo LED]
Sarkana LED = [uzlāde LED]
LED Punane = [laeb LED]


Žalias = Pasirengęs
Zaļš = Gatavs
Roheline = valmis

3

+



3,7 V 500mAh!
1,85 Wh Li-Ion

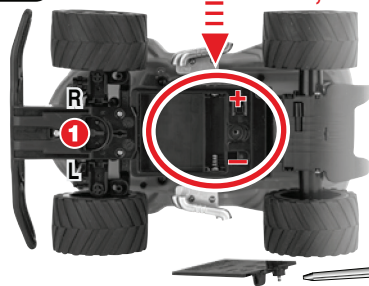


4



2x 1.5 V Micro AAA baterijas
2x 1,5 V Micro AAA baterijas
2 x 1,5 V micro AAA patareid

5

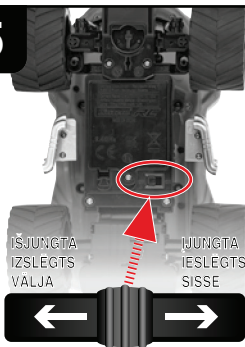

ISJUNGT
IZSLEGT
VALJA

ISJUNGT
IZSLEGT
SISSE

6



ISJUNGT
IZSLEGT
SISSE
(2 sek)

ISJUNGT
IZSLEGT
VALJA
(3 sek)

7

